




# LeetDesk

PC Holder

**Assembly Instruction**

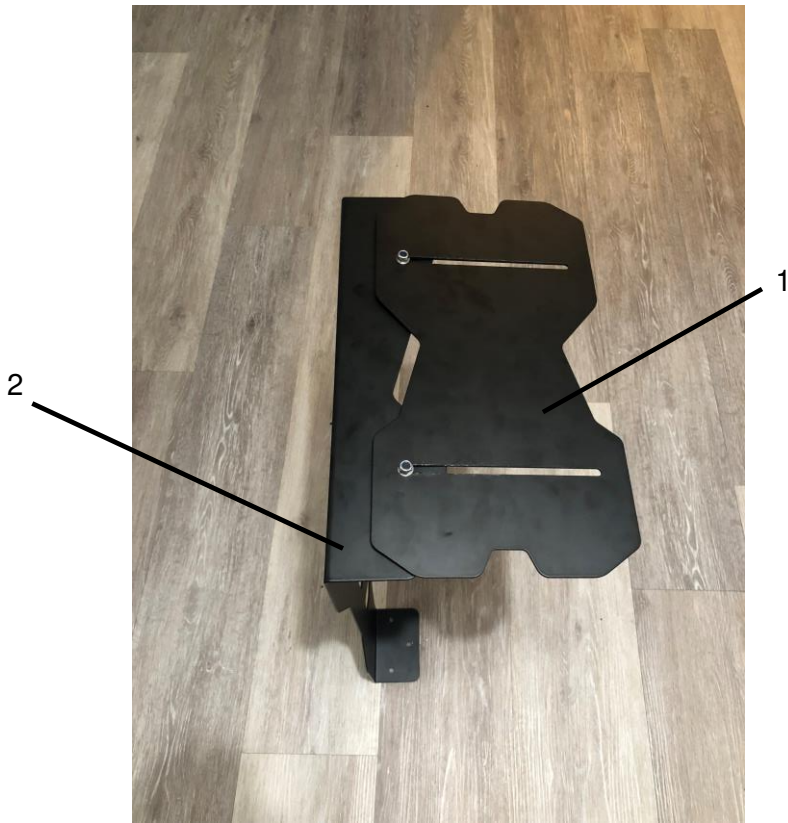

Attach the bottom plate (1) to either side bracket (2).

Do so by going in this order from top to bottom as seen in the picture:

- Nut
- Flat Washer
- Bottom plate
- Side Bracket
- Screw

Tighten the screws by holding the nut in place with the included wrench while simultaneously using the included allen wrench to turn it.

Do not tighten the screws too much, leave some space so you can still freely move the bottom plate.



Attach the other side bracket using the same method as before, again not tightening the screws too much.



Your PC Holder is now width-adjustable for the time being.

Adjust the PC Holder to the size of your PC by placing it inside the PC Holder and adjusting the width by sliding the two side brackets.

In it's widest setting, the PC Holder can fit a 25cm wide PC. Make sure to leave a little space to each side bracket when your space is inside, as to not damage your PC when putting it into the PC Holder.

After finding the right width of your PC Holder, you can fully tighten the screws.



Afterwards use the included 12 included wood screws to fix your PC Holder to the tabletop. Note that there are no predrilled holes in the tabletop for the PC Holder. This way you can choose which side of your LeetDesk you want your PC Holder to be.



Please make sure, that the side bracket is at least 3-4 cm away from the table leg as to not damage your PC Holder or your Desk.

After you have attached the PC Holder to the tabletop slide your PC inside it, making sure the screws are fixed tightly beforehand.